
Autoclaves for packaged food



**More versatility
and food safety,
lower costs and
processing time.**

Start a business with your own line of packaged food and ready meals or plan an expansion of your current project. TERRA Food-Tech® will allow you to increase your productivity while meeting food hygiene and safety regulations.

Cook, pasteurize and sterilize your products with a single piece of equipment. TERRA Food-Tech® has designed a compact autoclave to produce packaged food that offers the best performance on the market.



"We are very pleased with our TERRA Food-Tech® autoclave. It has met our expectations and more importantly, it has allowed us to work with high quality and safety. Definitely, it has been an excellent acquisition."

Luca Marchini

Michelin star chef, owner of the restaurant L'Erba de Re and the gourmet preserves brand Bottega da Re



“Cook, pasteurize and sterilize using a single piece of equipment”



Adjustable F_0 and P_0

Pasteurize or sterilize professionally and accurately using F_0 and P_0 values.



Adjustable pressure support

Programmable pressure support according to the type of container.



Fast cooling

Fast cooling by water shower to avoid product overcooking.



Precise control

Every process is continuously monitored thanks to the core probe.



Safety

Excellent safety measures for the user and his products.



Traceability


Manage and record each process from start to finish with our software.



Memory

Storage of up to 50 programs.

“Innovate with greater agility”

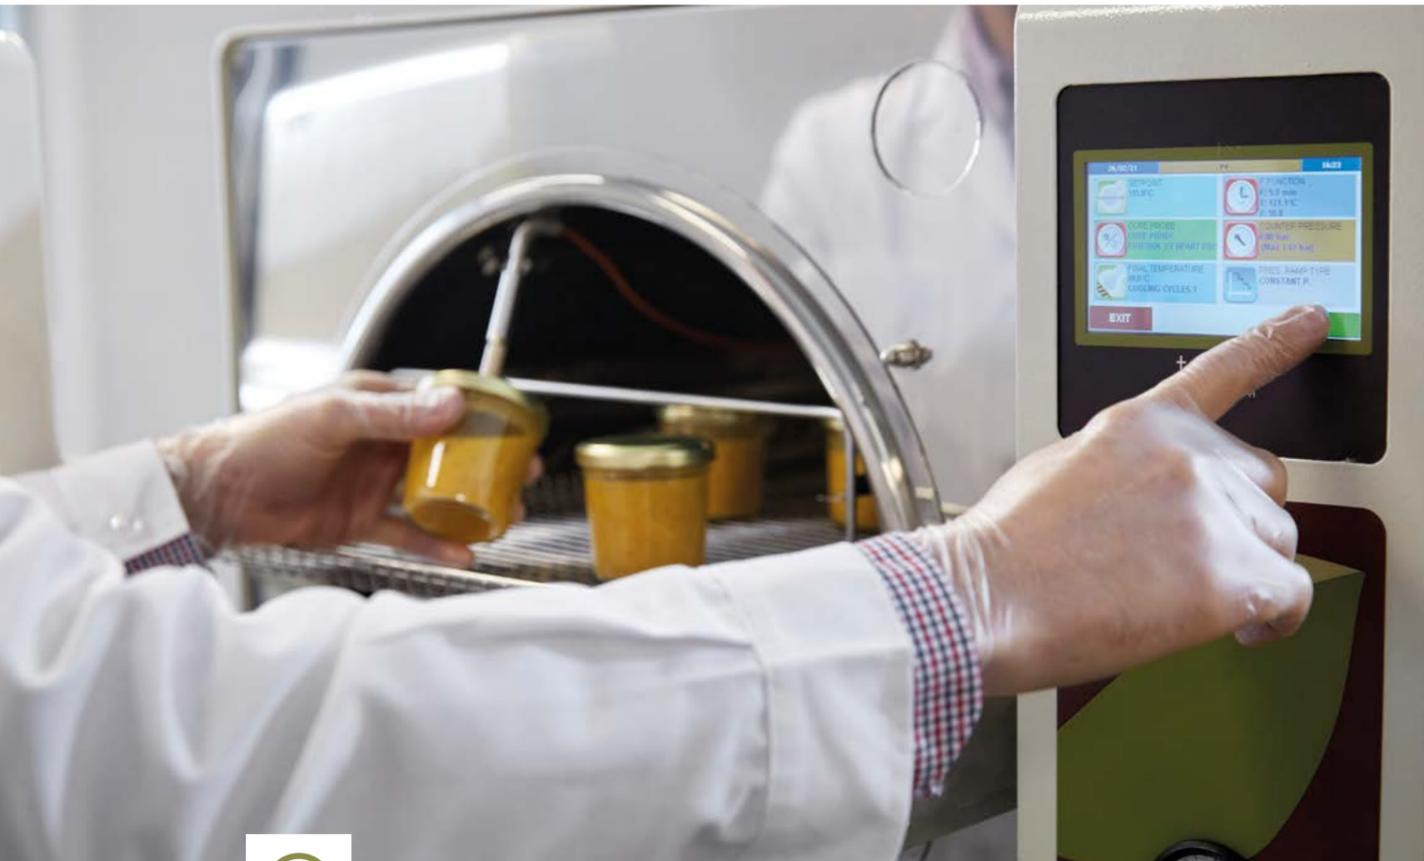

Adjustable F₀-P₀

Adaptable to each recipe requirements.

The autoclave can adjust these values according to each product's needs, minimizing changes in color, texture, smell and nutritional value.



Our autoclaves allow precise adjustment of F₀ and P₀ values, the maximum processing temperature to be reached and duration of processing time.

These values ensure optimal pasteurization or sterilization, protecting food from unnecessary heat exposure that may cause loss of organoleptic qualities or loss of nutritional value.



Adjustable pressure support

Programmable pressure support according to the type of container.

Avoid deformation, breakage or spillage of your containers during fast cooling stage thanks to the integrated air compressor within the equipment that provides additional pressure in an intelligent way.

The pressure value can be set by the user either by time segments or using a single constant value during both thermal processing and cooling stage.

Its programmable pressure support will minimize pressure differences between the chamber and the inner pressure of containers, avoiding their breakage or deformation.





Fast cooling

Avoid unnecessary heat exposure.



Once sterilization or pasteurization phase is finished, a fast cooling cycle begins, which lowers temperature through a water shower and water immersion system.

TERRA Food-Tech® autoclaves allow the option of choosing the number of chamber fillings and their respective duration, so each product can be cooled as fast as the user prefers or according to the product's needs.



Precise control

Cycle regulation by core probe or chamber probe.



By using a temperature probe placed inside a product sample, we ensure a perfect control of the process, ensuring the correct elimination of all microbial life within each container, while also preserving the organoleptic properties and minimizing possible changes regarding the nutritional value of the packaged product.





Safety features

Excellent safety measures for the user and his products.



Detection of positive pressure and protection against overpressure.



Safety valve and safety thermostat.



Door with opening sensor and thermally insulated cover.



Alarms, error messages and user admin control.



Traceability

Manage and record the entire process.

All parameters are continuously monitored and recorded to ensure correct processing. If the expected parameters are not achieved, the program is interrupted and a warning message is generated.

In addition, the software allows report printing and analysis of each cycle in great detail.



VERY IMPORTANT TO PASS A FOOD SAFETY AUDIT



Memory

Storage for up to 50 different programs.

- Programs with optional pre-cooking phase and adjustable cooling speed.
- Saves the values required to produce up to 50 different recipes.
- Easy to use and program.
- With color touchscreen.

Adjustable temperature between 50 and 130°C.

User admin control and automatic data recording for each cycle.

“The world of packaged food will always be a good business opportunity, as they have a long shelf life, can be kept at room temperature, maintain their nutritional properties and can be distributed to many sectors of society.”

Mireia Barba
President of Fundació Espigoladors and Es Im-perfect®.

“TERRA Food-Tech®’s autoclave has been a very important element for our business, without it we would not have been able to sell any of our products with a long shelf life. We are very happy with our autoclave and the consultancy services we received.”

Iris van Beers and Esther van der Hoeven
Founders of MixBlik, a social enterprise

“We needed a modern, intelligent, reliable and fully controllable autoclave to adapt it to our specific needs, and TERRA Food-Tech®’s autoclave has fully met our requirements.”

Xavier Roura
Founder of Spherience

“The importance of an autoclave is unquestionable because without it, it is impossible to pasteurize and/or sterilize and, therefore, you can’t meet the requirements set by health authorities.”

Antoni Izquierdo
Chef of Mas dels Arcs Restaurant and founder of Antoni Izquierdo Gourmet



Sectors and applications

TERRA Food-Tech® autoclaves are used in many sectors and applications.



✓
Restaurants and catering

Restaurants, chefs, catering companies, central kitchens, hotel chains and culinary schools that want to prepare gourmet packaged food and ready meals in a convenient, flexible, safe and simple way.



✓
Research centers

Benchtop and floor-standing autoclaves capable of performing tests for multiple R&D lines. These autoclaves have all the technology and versatility required by specialized centers in food science and technology, food ingredients, food formulation and packaging.



Entrepreneurs

Entrepreneurs, agrotourism businesses, farmers, cooperative groups, small producers and institutions that wish to prepare and market packaged food such as gourmet, artisanal or organic preserves.



Food industry

Establish a more versatile and agile production line for medium-range productions. Operators can also carry out trials and pilot batches without having to walk to another plant to use an industrial autoclave while affecting production schedule. You will also reduce energy costs and your environmental impact because these autoclaves do not require fossil fuels nor external steam boilers.



Education in vocational schools

Education in vocational schools, culinary schools and universities that want to train their students. Our autoclaves allow a complete simulation of commercial thermal processing, and they offer full control of multiple parameters, making it easy to analyze the results later on.



Packaging industry

Perform scientific research on new materials and packaging options, carry out internal quality control tests, stress tests, longevity studies as well as manufacture pilot batches in their own laboratories, without needing to travel or outsource those tests.



Advantages regarding food production

The advantages of having an autoclave when marketing your packaged food and ready meals.



Make your business a professional one

Produce your food by working with F_0/P_0 values and using fast cooling to refine your recipes, without losing its nutritional qualities, smell, color, texture and flavor.



Comply with food safety regulations

Obtaining individual records that detail the thermal processing of each batch will help you to comply with food safety and hygiene regulations required health authorities.



Obtain profits from agricultural surpluses and foodstuffs discarded for their appearance

Make your own packaged food from agricultural surpluses and prevent food waste. Promote a more sustainable and circular economy based on proximity commerce.



Avoid cold chain costs and expand your horizons

Sterilization allows you to distribute and market your products for a much longer period of time and into new markets without needing a cold chain during distribution or storage.



New business opportunity

Package your sauces or star dishes to reach a larger public and market your products wherever you want.



Professional food safety

TERRA Food-Tech® autoclaves can work with F_0 and P_0 values, so you can quantify and guarantee the correct elimination of microorganisms and spores according to your preferences.



Increase the best-before date of your products

By sterilizing your products, you can extend their best-before dates up to 5 years. If pasteurized, the best-before date can vary from weeks to up to 3 months.



Take advantage of your idle hours

Produce packaged food and ready meals during your kitchen's off-peak hours. Avoid food waste and obtain maximum profitability from your raw materials.



terra
FOOD·TECH

Advantages for packaged food R&D

All the technology and versatility of an industrial autoclave in a compact size.



Wide range of formats and capacities

Choose the model, accessories and configuration according to your specific needs. Available in 3 benchtop models and 5 vertical models.



Total parameter control

Process regulation by core probe or chamber probe, F_0/P_0 values, Z-value, reference temperature, pressure support values, cooling phase speed and chamber opening temperature.



Specialized software and comprehensive reports

Visualize and analyze each cycle's graphs with our specialized software. Comprehensive .PDF and .CSV reports can also be generated for each experiment.



Ramps and ΣF_0 & ΣP_0 values

Experienced users can customise pressure support and temperature ramps before and after thermal processing. The actual ΣF_0 and ΣP_0 values achieved are also displayed on screen and presented in the reports.



Excellent versatility to program and manage your cycles

5" TFT touchscreen color display with 50 programs available, customizable by name and featuring user admin control.



Easy to install

Compact design with integrated air compressor. To install the autoclave, all that is needed is a water inlet, a water outlet and an electrical connection. They do not require an external steam source or an external compressed air connection.



Available accessories for all types of applications

Specific accessories for all types of containers and applications. Validation accessories are also available.



Speed up your innovation

Perform your tests in your own laboratory autonomously, without needing to travel to another location, outsourcing your tests or booking time to use an industrial autoclave.





"The TERRA Food-Tech® autoclave plays a very important role in the development of our business, in terms of new products, lower defect rate, faster processing time and better preservation."

Ignatius Zaldy

EatNow Food Managing Director
(MyMeal Catering)

15 reasons to buy your TERRA Food-Tech® autoclave

- 1.** Specialist manufacturer of autoclaves for packaged food, offering you technical support and food consultancy services.
- 2.** It allows you to comply with food safety and hygiene regulations.
- 3.** It maintains organoleptic and nutritional characteristics of your products.
- 4.** They are equipped with fast cooling to avoid damaging your containers or overcooking your recipes.
- 5.** Improve your productivity and reduce labor costs.
- 6.** Versatility for sterilizing or pasteurizing.
- 7.** Easy to install and use.
- 8.** Allows control of doneness during the process.
- 9.** Excellent security and traceability measures.
- 10.** Guarantees correct pasteurization or sterilization thanks to regulation based on F_0/P_0 .
- 11.** Ability to work with either core probe or chamber probe control.
- 12.** Compatible with all types of food and containers.
- 13.** 50 programs available with control on multiple parameters.
- 14.** Adjustable pressure support according to the type of container through a powerful integrated air compressor.
- 15.** Choose among 8 different models, with capacities ranging from 21 to 175 liters.

Accessories

General accessories



Water softener

TERRA Food-Tech® autoclaves require soft water. This prevents limescale residues from being deposited inside pipes and sterilization chamber.

WATERSOFT



Specialized software

Allows control, analysis and recording of all thermal processes carried out in the autoclave.

SWTERRA



Integrated printer

Prints tickets with data about each cycle: batch number, program name, parameter evolution, time and date, error messages. It must be installed in our factory.

IT/TS

Specific accessories for vertical autoclaves



Basket lifting cranes

Fixed or mobile cranes for a safe and comfortable lifting of heavy loads inside the autoclave.

ELEV-CLAV, ELEV-CLAV-R & MOB-LIFT



Standard and custom-made baskets and racks

Reinforced baskets available in specific sizes for each autoclave model. Baskets and racks customization upon request.

CVT & BCVT



Modular tray support

Stainless steel support. Different models available for each autoclave model.

SRA-CFS



Silicone separators

Protects delicate containers from aesthetic changes after processing.

SEP-CFS



Additional core probe

Install a second core probe, especially suitable for research environments. It must be installed in our factory.

PT-2-CFS



Specific drilling kits

Necessary to insert the core probe into the correct depth of the reference sample. Specific kits are available for different types of containers. All autoclaves include a KIT-CFS-T for containers with metal lids.

KIT-CFS-T, THW-PG-V & THW-PG-H



Temperature recorder in disk format

Temperature recorder in disk format with connection base and software. Temperature monitoring in hermetically sealed containers, especially suitable for doypacks and pouches.

DLDISK

Specific accessories for benchtop autoclaves



Tray rack

Stainless steel rack designed for placing trays.

ST



Rectangular basket

Stainless steel basket for large loads.

RB



Trays

Stainless steel trays. A rack is required to place the trays inside the autoclave.

BAH



Bag holder support

Stainless steel support to place flexible containers (such as pouches) inside benchtop autoclaves.

BAP

Which is the right autoclave for you?

8 different models available.



	CFS-28V	CFS-50V	CFS-75V	CFS-110V	CFS-150V	CFS-21H	CFS-50H	CFS-75H
Total/usable chamber volume L	33/30	55/48	79/73	115/104	175/150	21/19	55/50	79/75
Usable chamber dimensions Ø x H mm	300 x 350	300 x 620	400 x 495	400 x 740	500 x 675	210 x 430	400 x 400	400 x 600
External dimensions L x D x H mm	505 x 580 x 1110	505 x 580 x 1290	610 x 700 x 1185	610 x 700 x 1435	750 x 820 x 1400	560 x 660 x 425	805 x 805 x 650	805 x 1005 x 650
Power W	2000	3200	4500	6000	9000	2000	2800	3200
Gross weight Kg	90	110	140	180	265	55	125	140
Voltage* V	230 (1P+N+E)	230 (1P+N+E)	400 (3P+N+E)	400 (3P+N+E)	400 (3P+N+E)	230 (1P+N+E)	230 (1P+N+E)	230 (1P+N+E)
Frequency HZ	50/60	50/60	50/60	50/60	50/60	50/60	50/60	50/60

*Other electrical settings or voltages are available upon request.

Regulations

Our autoclaves comply with the following international regulations and standards:

EN-61010-1 Safety requirements for electrical equipment intended for measurement, control and laboratory use. Part 1: General requirements.

EN-61010-2-040 Part 2-040: Specific requirements for laboratory autoclaves.

EN-61326 Electrical equipment intended for measurement, control and laboratory use. Electromagnetic compatibility requirements.

2000-Merkblatt Pressure vessels.

2014/35/EU Low voltage.

2014/30/EU Electromagnetic compatibility.

2014/68/EU Pressurized equipments.

UNE-EN-ISO 9001:2015 Quality management systems.




Not decided yet? ...we'll be glad to help you!



Customized productivity studies.

For applications involving non-cylindrical containers, such as pouches, plastic trays or plastic bags, please contact us and we will carry out a custom productivity study.

foodconsultancy@terrafoodtech.com

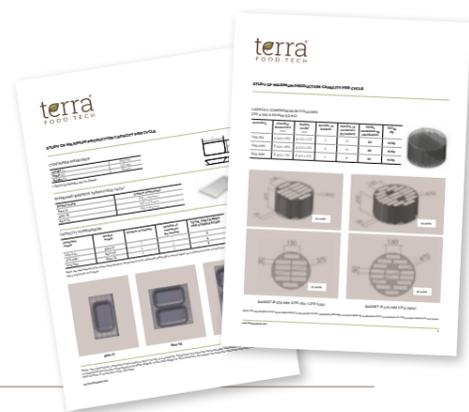

A free and online productivity calculator is available.

Enter the diameter and height of your cylindrical container and you will obtain the number of containers you can process per cycle for each model of our autoclaves.

www.terrafoodtech.com/en/productive-capacity/







 "At Foz-Clua Asparagus we are very happy with both the autoclave and the technical service. We would recommend it a thousand times over."


Rubén Foz

 Owner of Foz-Clua Asparagus

360° customer support and food consultancy services

We support you at all times. Before, during and after purchasing your autoclave.

- We help you to choose the autoclave model and accessories that best suits your needs.
- We offer technical support and food consultancy services on application feasibility.
- We provide after-sales support wherever you are.
- We train your operators.

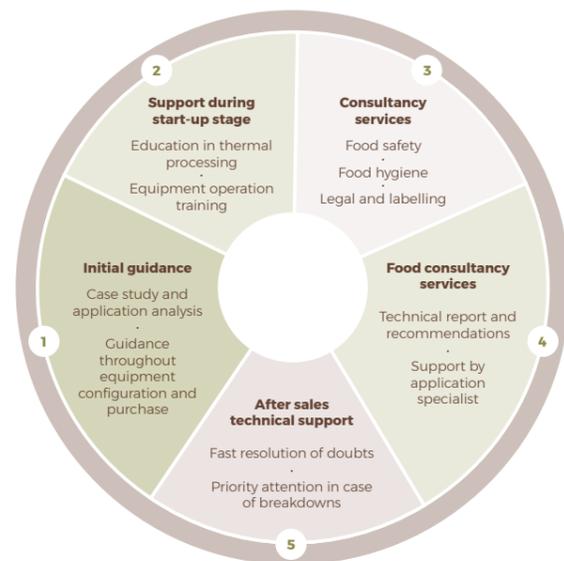

After-sales services

- **Professional consultancy services**
Our experts offer training and technical and food consultancy services adapted to your case. A dedicated TERRA Food-Tech® application specialist supports our customers.
- **Guided start-up**
Installation review, training on equipment operation and guidance on software/program configuration.
- **Maintenance**
We guide you about your autoclave's maintenance plan. Maintenance contracts are also available.
- **Spare parts and repairs**
We have a qualified technical team and a spare parts warehouse to attend as quick as possible any equipment malfunction or spare parts order.

*If on-site guided start-up is not possible, we offer a remote start-up option. Service availability is subject to geographic location. Some services are offered free of charge before and/or after ordering an autoclave, other services may be subject to certain fees. Some of the listed services will be offered by the manufacturer or by a TERRA Food-Tech® authorized distributor.



Tel. +34 937 830 720

hello@terrafoodtech.com
www.terrafoodtech.com/en/

Avinguda del Vallès, 322
Pol. Ind. "Els Bellots"
08227 Terrassa (Barcelona) Spain

terra®
FOOD · TECH